

latency end-to-end transport of secure, high-quality video, even over unpredictable networks.

Makito X products are available in a broad range of configurations including:

- H.264 and/or HEVC encoding and decoding
- Single, dual, or quad-input channel operation
- Compact, ruggedized & fanless operation
- HD-SDI/Composite or DVI input options
- Storage options: fixed, removable or without storage
- Rackmounting in high density 1RU, 2RU or 4RU chassis

Encoder Options



Makito X4 Encoder

Designed for the most demanding live low latency video applications, the Makito X4 Encoder can support up to four 1080p50/60 HD inputs or a full 2160p50/60 4K UHD video source with up to 32 channels of digital audio.

4K Broadcast Quality Video At either 8- or 10-bit pixel depth, Makito X4 delivers excellent picture quality, making it ideal for a broad range of live video applications. For workflows where superior color precision is needed, the Makito X4 offers 4:2:2 chroma subsampling and 10-bit pixel depth to ensure that maximum color fidelity can be maintained, and artifacts prevented, in downstream workflows.

Ultra Low Latency The Makito X4 streams HEVC and H.264 video with very low latency, making it ideally suited for interactive video applications such as field contribution, live interviews, and return feed confidence monitoring as well as mission critical ISR applications.





Makito X H.264 Encoders & Decoders

Haivision's award-winning Makito X H.264 encoder and decoder transports secure, low latency, HD video over any network at extremely low bitrates. And with Network Adaptive Encoding, Makito X ensures your stream plays even when network performance chokes. The Makito X is ideal for live, interactive and bandwidth constrained applications and is available with single channel SDI, DVI and Dual channel SDI configurations.

Stream Sync for Remote Production Multiple Makito X encoders & decoders can be used with synchronized cameras to enable cost-effective and efficient remote production capabilities with multi-channel simultaneous decoding & playback.

Security & Stream Tuning By implementing the Advanced Encryption Standard (AES) protocol within Haivision's SRT, Makito X decoders delivers video content securely and ensures high quality even on congested or unreliable networks. The Makito X decoder provides recovery from packet loss with either forward error correction (FEC) or using SRT with an adjustable receive buffer to tune its performance for various network conditions.





Makito X HEVC Encoder & Decoder

With the Makito X HEVC, you can reduce bandwidth requirements by 50%, while maintaining video quality when compared to H.264. The Makito X HEVC differs from competing HEVC encoders by combining a four engine Makito X H.264 architecture with a dedicated HEVC encoding engine. Makito X HEVC supports existing H.264 workflows, and offers the best-in-class HEVC performance.

HEVC & H.264 Decoding The Makito X HEVC Decoder is a highly-versatile component of any low-latency video workflow. Compatible with the Makito X4 Encoder and capable of decoding streams with 8- or 10-bit pixel depth & 4:2:0 or 4:2:2 chroma subsampling, the Makito X HEVC Decoder supports the most demanding broadcast, defense and enterprise applications.

Encoder Options





Makito X Encoder with Storage

Record High, Stream low The Makito X with Storage is the perfect encoder for situations where bandwidth availability is limited and keeping a high quality master for further review, archiving or post production workflows is necessary. The Makito X with Storage is built with multiple encoding cores, allowing you to stream live video at low bitrates while recording up to two high quality streams directly onto the encoder. Both .ts and .mp4 files are supported.

Fixed and Removable Storage With 250GB (expandable up to 1TB) of either fixed or removable storage, the Makito X with Storage can record up to 5 days at 5Mb/s or 30 hours at 20Mb/s. Removable storage is powered by industry standard 2.5" SATA SSD drives, giving you the option to quickly remove a drive once full, and allowing for content backups regardless of how close you are to your main storage/ server facility.

Remote Management The Makito X with Storage can be programmed and controlled remotely through command line, web UI, and SNMP APIs. You can set a time or size limit on the recording segments allowing for easier management of your video files. Simply upload your video from the Makito X with Storage to a USB, SD Card, Haivision Video Cloud, Haivision Media Platform, FTP, or NFS





Makito X Harsh Encoder & Decoder

Extreme Encoding & Decoding The Makito Harsh Environment encoder and decoder are industrial-grade fanless appliances designed for high operating temperature environments within static deployment applications.

The Makito X series of H.264 encoders and decoders for harsh environments delivers a complete field proven video solution offering confidence, security, and reliability with a mature feature set.

Key Features Makito X Series



High Quality

Delivers pristine quality live encoded video, even at low bitrates, making it ideal for Internet or satellite transport of video.



4K Broadcast Quality Video

Encode live video up to 4K/UHD for streaming over IP networks. Supporting up to 4:2:2 10-bit color for workflows where superior color precision is needed.



Remote Production with Stream Sync

Makito X series includes encoder/decoder pairs for any high-performance use case as well as synchronized multi-camera workflows. Provide a cost-effective alternative to deploying large teams of personnel & resources at remote event locations.



Secure end-to-end unicast or multicast video distribution & AES 128/256 bit encryption.



KLV Metadata

Supports full-motion video requiring STANAG and MISP compliant Key-Length-Value (KLV) metadata.



Ultra Low Latency

Ideal in applications where end-to-end latency below 200 ms is required. Respond in real-time to mission-critical video information.



Next-gen Compression

Flexible encoding & compression, adapting to different network environments and applications. HEVC (H.265) options reduce bandwidth by up to 50% compared to H.264.



SRT

Assures quality-of-service when faced with packet loss, jitter, latency, and fluctuating bandwidth from unpredictable networks.



Ruggedized

Fanless chassis option designed for high operating temperature environments. Designed for demanding portable and space-constrained applications.



High Density

Highly flexible deployment from ultra compact appliance to 21 blade (4RU) chassis. Ideal where size, weight and power considerations are critical.



Industries Makito X Series

Powerful Features for Defense, Broadcast, and Enterprise

The Makito X series of encoders and decoders are designed to address the most rigorous video applications in enterprise, defense and broadcast. Multi-bitrate (MBR) encoding to unicast, multicast, and RTMP enables administrators to direct many unique streams groomed to specific desktop and mobile viewers, set-top boxes, recorders, and Internet destinations. With Network Adaptive Encoding and SRT, the Makito X dynamically adapts to changing network conditions so you never lose your video streams.

Integrated features such as snapshots, logo insertion, Selective MuteTM, talkback, and powerful control interfaces enable advanced video network management in enterprise applications. The excellent picture quality at low bandwidth and the lowest end-to-end latency of the industry makes the Makito X platform ideal for a broad range of applications.

The Makito X series is ideal for live, interactive and headend applications and is used in:

DEFENSE



Mission Command & Control Situational Awareness Cross Domain Sharing

BROADCAST



Live News Contribution Remote Production Point-to-Point Distribution


ENTERPRISE



Backhaul for All Hands Remote Contribution Secure IPTV Contribution

Defense | Mission Critical Video Solutions

Haivision video streaming solutions support mission-critical video applications. With high quality, low latency, and best-in-class security, Haivision solutions power applications for Intelligence, Surveillance, Reconnaissance (ISR), Test & Training Ranges, and Command & Control (C2) operations centers. Makito X encoders are designed for ISR applications where uplink network bandwidth is limited and costly. Combining KLV and CoT metadata support makes the Makito X ideal for Full Motion Video (FMV) applications in government and military.

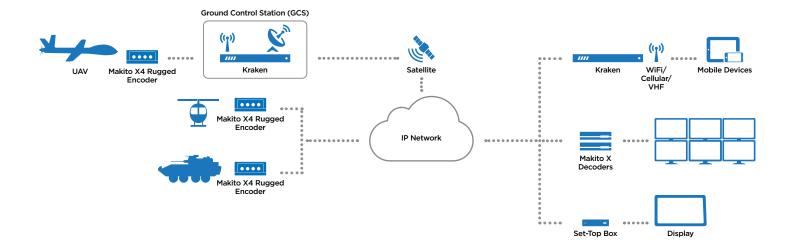




Industries Makito X Series


Broadcast | 4K Field Contribution with Makito X4

Meet your audience's demand for more content with Makito X encoders and decoders. When news is breaking, internationally or regionally, timely access to relevant video is critical. By using Haivision's Makito X encoding technology for low latency video, broadcasters are getting field content from anywhere, cost-effectively, over any network.

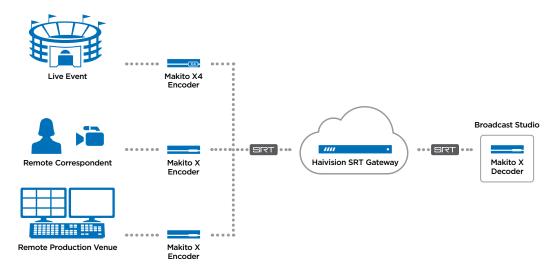


Broadcast | Remote Interviews & Interactive Contribution

With the Makito X encoder and decoder, broadcasters have the power to provide audiences with more content from remote locations, allowing for real-time commentary on breaking news or current events. With low latency and SRT, broadcasters can take advantage of low cost internet connections to deliver high quality video without the need for dedicated networks or satellites.

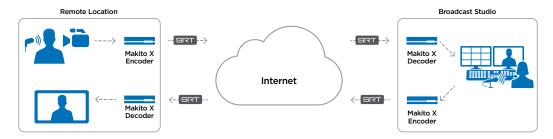

Broadcast | Remote Production

Haivision Remote Production workflows allow you to cover a wide range of live events including sports, musical performances or news, without the costly overhead of deploying production teams and OB trucks to each site. By streaming synchronized, low latency multi-camera feeds from venue to the broadcast studio over cost-effective IP networks, you can boost your productivity and satisfy the need for more content without the costs of onsite deployment or the logistical challenges.

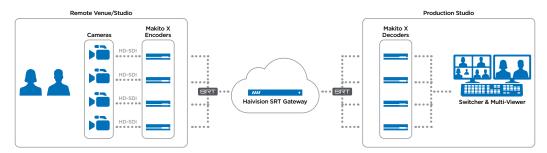




Industries Makito X Series


Broadcast | Confidence Monitoring & Return Feeds

Makito X encoders are suitable for many broadcast contribution workflows. With the addition of Haivision SRT Gateway, producers can make quick decisions through confidence monitoring of broadcast production feeds live on their mobile devices from anywhere, even when on-the-go.

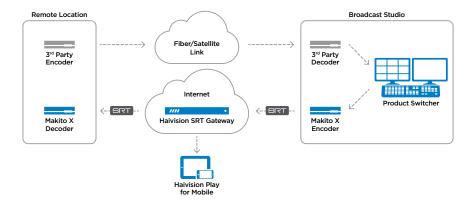

Enterprise | Corporate Communications

Communication is critical to efficient enterprise operations and an effective communication strategy relies on selecting the right delivery channels. Haivision's portfolio of video streaming solutions including the Makito X series help enterprises connect with their employees, customers or partners with live or on-demand video distributed within a private network or over the Internet.

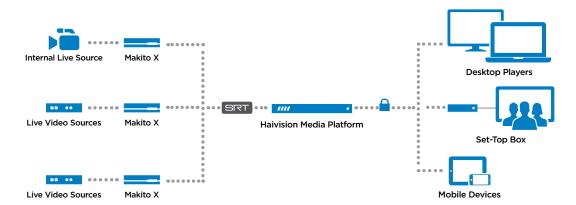

Related Products



Haivision Media Platform



Haivision SRT Gateway



KB Encoder/Transcoder



Kraken CR Transcoder





High Density, Flexible, and Scalable Chassis

Designed for high density deployment in server rooms across broadcast, enterprise, universities, and hospitals, the MB series of chassis provide flexible and scalable solutions where rackmount installations are required.

High Density Multichannel Chassis Haivision's encoders, decoders, and gateways are available as single product appliances or as independent mini-blades. For installations where rack mounting is desired, Haivision offers rackmount kits for single and dual-height appliance enclosures, as well as the MB6 and MB21 enclosures, which can contain up to 6 or 21 encoder/decoder blades, respectively, within the single highest density platform available. MB6 & MB21 series enclosures feature redundant power supplies, allow for in-service blade replacement and incorporate fan management circuitry to minimize fan noise. MB series enclosures can be populated with various combinations of Haivision's Makito high performance, HEVC or H.264 encoders, and HEVC or H.264 Makito decoders.

MB1 & MB2 Enclosures Makito X blades can be mounted in lightweight and portable single-height (MB1) or dual-height (MB2) enclosures. The MB2 can contain two single-height encoder or decoder blades, one dual-height encoder or decoder, or both an encoder and a decoder, providing a flexible options for building a portable unit.

MB6 AC, DC and Medical High Density Six-Slot Chassis The MB6 is designed to support fast deployments of Haivision's market-leading encoding/decoding systems in the most space constrained installations. The six-slot chassis can hold up to 6 Makito and Makito X encoders/decoders or Torpedo DVB to IP gateways, in just a single rack unit (IRU), making it the highest density system available. The MB6 is available with either redundant AC, single DC, or medical grade AC power supplies.

MB21X High Density Twenty-One Slot Chassis Designed for high density IP video headends, the MB21 holds any combination of up to 21 Makito X ir X4 products in a 7-inch rack (4RU) and also features replaceable fans and fully redundant power supplies. This high density, cost effective solution has been deployed in headends and server rooms in universities, hospitals, and enterprises worldwide. In addition, the MB21X provides a station alarm interface so as to notify operators when a power supply or fan failure has occurred.

Redundancy Redundant AC inputs and a field serviceable power supply allows the MB21 to continue operating even if an AC input is lost or a Power Supply Unit (PSU) fails. The MB21X dual PSU variant can remain fully operational if a single power supply has failed. With the MB6X-RAC, a single AC input or PSU can fail without affecting the operation of the unit.

Rackmounting Appliances

1RU or 2RU mounting brackets available for mounting one or two Makito or Makito X appliances (single or double height) in machine rooms racks.







		Mal	kito X Enco	oders			Mak	kito X Decc	ders
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh
CHANNELS									
Single	•	•	•	•	•	•	•	•	•
Dual	•		•	•		•	•	*	•
Quad						•			
VIDEO INPUTS									
ANALOG									
Composite NTSC/PAL/PAL-M	•		•	•					
Y, Pb, Pr / RGBHV component analog		•			•				
Y, Cb, Cr / DVI single link component digital		•			•				
SD-SDI									
SMPTE 259M-C	•		•	•		•			
HD-SDI									
SMPTE 292M	•		•	•		•			
SMPTE 274M	•		•	•		•			
SMPTE 296M	•		•	•		•			
3G-SDI									
SMPTE 424M (Level A Only)	•		•	•		•			
SMPTE 425M	•		•	•		•			
6G-SDI									
SMPTE 2081						•			
12G-SDI									
SMPTE 2082						•			
DVI-I									
HDMI 1.4		•			•				
VIDEO OUTPUTS									
SD-SDI									
SMPTE 259M-C							•	•	•
HD-SDI									
SMPTE 292M							•	•	•
SMPTE 274M							•	•	•
SMPTE 296M							•	•	•
3G-SDI									
SMPTE 424M (Level A Only)							•	•	•
SMPTE 425M							•	•	•
номі									
HDMI 1.4							•	•	•

 $^{^{}st}$ Dual-channel HEVC decode up to 1080p30.



			Makito X Encoders						Makito X Decoders			
		H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh		
VIDEO RESOLUTIONS												
4K UHD												
3840x2160p 60/59.94/50/30/	29.97/25/24 Hz						•					
HD 1080												
1920x1080p 60/59.94/50/30/2	29.97/25 Hz	•	•	•	•	•	•	•	•	•		
1920x1080p 24/23.98 Hz		•	•	•	•	•	•	•	•	•		
1920x1080i 60/59.94/50 Hz		•	•	•	•	•	•	•	•	•		
HD 720												
1280x720p 60/59.94/50 Hz		•	•	•	•	•	•	•	•	•		
1280x720p 30/29.97/25 Hz		•	•	•	•	•	•					
SD												
720x480/576i 60/59.94/50 Hz		•	•	•	•	•	•	•	•	•		
720x480/576p 60/59.54/50 H: (HDMI/DVI only) interlaced sho			•			•		•		•		
COMPUTER RESOLUTION	S HDMI/DVI ONLY											
1920x1200 60 Hz 1680x1050 60 Hz 1600x1200 60 Hz 1600x900 60 Hz 1400x1050 75/60 Hz 1440x900 75/60 Hz 1360x768 60 Hz	1280x1024 75/60 Hz 1280x800 85/75/60 Hz 1280x768 85/75/60 Hz 1152x864 75 Hz 1024x768 85/75/60 Hz 800x600 85/75/60 Hz 640x480 85/75/60 Hz		•			•		•		•		
VIDEO ENCODING												
VIDEO COMPRESSION												
H.265/HEVC (ISO/IEC 23008-2	2)			•			•		•			
H.264 (MPEG-4 AVC part 10 / I	SO/IEC 14496-10)	•	•	•	•	•	•	•	•	•		
High Profiles		•	•	**	•	•	•	•	**	•		
Baseline & Main Profiles		•	•	•	•	•	•	•	•	•		
Up to Level 5.2 (UHD) and lowe	er intermediate levels						•					
Up to Level 4.2 and lower inter	mediate levels	•	•	**	•	•	•	•	**	•		
Up to Level 4 (1080p60) (HEV	C)			**			•		**			
8-bit or 10-bit pixel depth							•		•			
4:2:0 or 4:2:2 chroma sub-samp	oling						•		•			
I, IP framing		•	•	•	•	•	•	•	•	•		
IBP, IBBP framing		•	•	**	•	•	•	•	•	•		
IBBBP, IBBBBP framing							•		•			
Configurable Group of Picture	(GOP) size	•	•	•	•	•	•					
Configurable frame rate		•	•	•	•	•	•	•	•	•		
Region of Interest Coding		•	•	**	•	•						
Bit Rates (SD/HD) H.264		32 kbps - 25 Mbps	32 kbps - 30 Mbps									
Bit Rates (SD/HD) HEVC				15 kbps - 15 Mbps			32 kbps - 60 Mbps					
Rate Control		CBR/VBR	CBR/VBR	CBR/VBR	CBR/VBR	CBR/VBR	CBR/VBR					
		<55ms	<55ms	<55ms H.264	<55ms	<55ms	<55ms H.264					

^{**} for H.264 only.



	Makito X Encoders						Makito X Decoders		
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh
AUDIO I/O									
AVAILABLE THROUGH A LOCKING MINI-DIN-8 CONNECTOR									
Balanced stereo analog audio	•	•	•	•	•		•	•	•
Unbalanced stereo analog audio	•	•	•	•	•		•	•	•
Talkback	•	•	•	•	•		•	•	•
EMBEDDED AUDIO									
SD-SDI SMPTE 272M	•		•	•		•	•	•	•
HD/3G-SDI SMPTE 299M	•		•	•		•	•	•	•
Embedded DVI (encoder only)		•			•				
HDMI 1.4 (decoder only)							•	•	•
AUDIO ENCODING/DECODING									
COMPRESSION STANDARD									
MPEG-2 AAC-LC ISO/IEC 13818-7	•	•	•	•	•	•	•	•	•
MPEG-4 AAC-LC ISO/IEC 14496-3	•	•	•	•	•	•	•	•	•
AUDIO CHANNELS									
2 analog audio per blade	•	•	•	•	•		•	•	•
32 embedded audio per blade (SDI)						•			
16 embedded audio per blade (SDI)	•	•	•	•	•	•	•	•	•
2 embedded audio per blade (DVI)		•			•				
8 embedded audio per blade (HDMI)							•	•	•
Bit Rates:									
From 56 to 320 kbps per audio pair	•	•	•	•	•	•	•	•	•
FREQUENCY RESPONSE									
From 20 Hz to 22 kHz	•	•	•	•	•	•	•	•	•
High precision timecode insertion as per MISB 0604.2	•	•	•	•	•	•			



			Makito X	Encoders			Mak	ito X Deco	ders
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh
METADATA (OPTIONAL)									
INPUT METADATA									
KLV over SD-SDI/HD-SDI/3G-SDI			•	•		•		•	•
KLV or CoT over serial RS-232/422		•	•	•	•				
KLV or CoT over UDP/IP		•	•	•	•	•			
METADATA PROCESSING									
CoT to KLV conversion	•	•	•	•	•	•			
CoT Relay	•	•	•	•	•	•			
Insertion and KLV edits	•	•	•	•	•	•			
CC 608/708 pass-through			•	•		•		•	•
SMPTE 336M compliant	•	•	•	•	•	•	•	•	•
MISB 0601.14 compliant	•	•	•	•	•	•	•	•	•
MISB 0604.2 compliant	•	•	•	•	•	•	•	•	•
Asynchronous & synchronous modes as per MISB 0604.2	•	•	•	•	•	•	•	•	•
High precision timecode insertion as per MISB 0604.2	•	•	•	•	•	•			
STORAGE OPTIONS									
250GB mSATA SSD Fixed	optional	optional							
250GB SATA SSD Removable	optional	optional							
RECORDING OPTIONS									
FILE FORMATS									
TS	optional	optional							
MP4	optional	optional							
Record KLV source metadata in TS format	optional	optional							
FILE SEGMENTS									
File Size	optional	optional							
Time Limit	optional	optional							
AUTO-EXPORT									
FTP Server	optional	optional							
Haivision Media Platform	optional	optional							
Haivision Video Cloud	optional	optional							
ASSET MANAGEMENT									
Copy/Move assets from SSD to NAS, SD or USB devices (SD and USB is specific to the fixed storage option)	optional	optional							
Download assets to your PC	optional	optional							
Browse assets within Makito X with Storage Web UI	optional	optional							
Playback MP4 assets within Makito X with Storage Web UI	optional	optional							
All assets are stored within an EXT4 file system on the SSD	optional	optional							
When connecting the SSD to a Windows/MAC, Paragon software must be used	optional	optional							



			Makito X	Encoders			Mak	ito X Deco	ders
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh
IP NETWORK INTERFACES									
STANDARD									
Ethernet 10/100/1000 Base-T, auto-detect, Half/Full-duplex	•	•	•	•	•	•	•	•	•
Static IPv4/IPv6/ DHCPv4/v6	•	•	•	•	•	•	•	•	•
Unicast streaming	•	•	•	•	•	•	•	•	•
Multicast streaming (IGMP v3, ICMPv6)	•	•	•	•	•	•	•	•	•
Multiple unicast streaming	•	•	•	•	•	•			
STREAMING PROTOCOLS									
MPEG Transport Stream over UDP / RTP	•	•	•	•	•	•	•	•	•
RTMP (IPv4 only)	•	•	•	•	•				
SAP (RFC 2974)	•	•	•	•	•		•	•	•
Secure Reliable Transport (SRT)	•	•	•	•	•	•	•	•	•
Direct-RTP - H.264 over RTP (RFC 3984)	•	•	**	•	•				
RTSP (For specified devices)	•	•	•	•	•		•	•	•
Connector RJ45	•	•	•	•	•	•	•	•	•
MANAGEMENT INTERFACES									
STANDARD									
RJ45 to RS-232 (DB-9 Management Cable Req'd.)	•		•	•					
Ethernet	•	•	•	•	•	•	•	•	•
MANAGEMENT									
HTTPS (web browser)	•	•	•	•	•	•	•	•	•
Command line over SSH/Telnet/RS-232	•	•	•	•	•		•	•	•
SFTP/TFTP/SCP	•	•	•	•	•	•	•	•	•
SNMP v3	•	•	•	•	•	•	•	•	•
Haivision EMS	•	•	•	•	•	•	•	•	•
ONVIF API	•	•	•	•	•				

^{**} for H.264 only.



		Makito X Encoders						kito X Deco	ders
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh
ADVANCED FEATURES									
Network Adaptive Encoding	•	•	•	•	•	•			
Multi-bitrate (MBR) streaming	•	•	•	•	•	•			
HD/SD de-interlacing	•	•	•	•	•	•	•	•	•
Built-in downscaling	•	•	•	•	•	•	•	**	•
EIA-608-B/NTSC Line 21 closed captioning	•		•	•			•	**	•
EIA-708-B/SDI closed captioning	•		•	•		•	•	**	•
Forward Error Correction (FEC)	•	•	•	•	•	•	•	•	•
AES encryption 128-bit or 256-bit with SRT	•	•	•	•	•	•	•	•	•
Aspect ratio configuration	•	•	•	•	•	•			
Active Format Description (AFD)	•		•	•		•	•	**	•
Wide Screen Signaling (WSS)	•		•	•			•	**	•
Timecode (ATC_VITC)	•	•	•	•	•	•	•	•	•
Selective Mute	•	•	•	•	•	•			
Talkback	•	•	•	•	•		•	•	•
Color Space Conversion (DVI only)		•			•				
Image Cropping	•	•	•	•	•	•			
Image Filtering	•	•	•	•	•	•			
Bi-directional serial passthrough	•		•	•					
Advanced Buffering Control							•	•	•
Still Image Insertion	•	•	•	•	•		•	•	•
Logo Overlay	•	•	•	•	•				
Synchronized playback between decoders							•	•	•

^{**} for H.264 only.

Software Version

• Makito X Encoder: 2.4 • Makito X Decoder: 2.4 • Makito X4 Encoder: 1.1



Encoders & Decoders

			Makito X	Encoders			Makito X Decoders			
	H.264 SDI	H.264 DVI	HEVC SDI	H.264 Harsh SDI	H.264 Harsh DVI	X4	H.264	HEVC	H.264 Harsh	
DIMENSIONS (H X W X D)										
Millimeters	21x129x196	21x129x184	42x129x196	44x137x202	44x137x202	21x129x196	21x129x187	42x129x187	44x137x202	
Inches	0.83x5.1x7.7	0.83x5.1x7.2	1.7x5.1x7.7	1.73x5.4x8.0	1.73x5.4x8.0	0.83x5.1x7.7	0.83x5.1x7.4	1.7x5.1x7.4	1.73×5.4×8.0	
WEIGHT										
kg	1.14 1.36 w/ Storage	1.14 1.36 w/ Storage	1.36	1.8	1.8	1.14	1.14	1.36	1.8	
lbs	2.5 3 w/ Storage	2.5 3 w/ Storage	3	4	4	2.55	2.5	3	4	
POWER										
Blade/Appliance	12VDC 20W	12VDC 20W	12VDC 25W	12VDC 20W	12VDC 20W	12VDC 18W	12VDC 20W	12VDC 25W	12VDC 20W	
PSU External locking power supply	100-240 VAC 30W	100-240 VAC 30W	100-240 VAC 60W	100-240 VAC 30W	100-240 VAC 30W	90-240 VAC 40W	100-240 VAC 30W	100-240 VAC 60W	100-240 VAC 30W	
APPLIANCE TEMPERATURE										
Operating (°C)	0 to 40	0 to 40	0 to 40	0 to 70	0 to 70	0 to 40	0 to 40	0 to 40	0 to 70	
Non-operating (°C)	-30 to 70	-30 to 70	-30 to 70	-40 to 85	-40 to 85	-30 to 70	-30 to 70	-30 to 70	-40 to 85	
Operating (°F)	32 to 104	32 to 104	32 to 104	32 to 158	32 to 158	32 to 104	32 to 104	32 to 158	32 to 158	
Non-operating (°F)	-22 to 158	-22 to 158	-40 to 122	-40 to 185	-40 to 185	-22 to 158	-22 to 158	-40 to 122	-40 to 185	
HUMIDITY										
%			up to 95% non-condensing							


Rackmount Chassis

		6 Blade		21 Blade
	F-MB6X-RAC	F-MB6X-DC	F-MB6X-MED	F-MB21X-R
DIMENSIONS (H X W X D)				
Rackmount Units	19" 1RU	19" 1RU	19" 1RU	19" 4RU
Millimeters	44.07x 440.004 x 420.4	44.07x 440.004 x 420.4	44.07x 440.004 x 420.4	177.29 x 441.35 x 461.92
Inches	1.735 x 17.323 x 16.55	1.735 x 17.323 x 16.55	1.735 x 17.323 x 16.55	6.980 x 17.376 x 18.186
WEIGHT - EMPTY CHASSIS				
kg	7.94	7.94	7.94	14.52
lbs	17.5	17.5	17.5	32
POWER				
Internal Power Supply	90-264 VAC 47Hz-63Hz 300 Watt max	20-36 VDC 300 Watt max	90-264 VAC 47Hz-63Hz 300 Watt max	100-240 VAC 47Hz-63Hz 600 Watt max
APPLIANCE TEMPERATURE				
Operating (°C)	0°C to 50°C	0°C to 50°C	0°C to 50°C	0°C to 50°C
Non-operating (°C)	-40°C to 70°C	-40°C to 70°C	-40°C to 70°C	-40°C to 70°C
Operating (°F)	32°F to 122°F	32°F to 122°F	32°F to 122°F	32°F to 122°F
Non-operating (°F)	-40°F to 158°F	-40°F to 158°F	-40°F to 158°F	-40°F to 158°F
HUMIDITY				
%		up to 95% non-condensing		


info@haivision.com | North America: 1.877.224.5445 haivision.com | International: +1.514.334.5445




Encoders




Makito X (Single SDI)



Makito X (Dual SDI)




Makito X (DVI)



Makito X4 Encoder


⊕ ᢙ

Makito X HEVC (Single SDI)




Makito X HEVC (Dual SDI)


Encoders with Storage




Makito X DVI with Fixed Storage



Makito X DVI with Removable Storage




Makito X Dual SDI with Fixed Storage




Makito X Dual SDI with Removable Storage


Harsh Environment Encoders

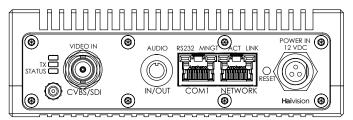

Makito X (Harsh Environment Single Channel SDI)




Makito X (Harsh Environment Single Channel DVI)

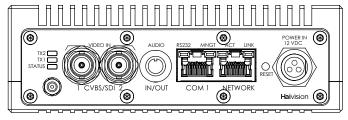


Makito X (Harsh Environment Dual Channel SDI)


Decoders




Makito X Decoder

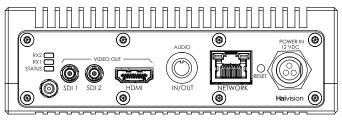


Makito X Decoder (Harsh Environment Dual Channel)




Makito X HEVC Decoder (Dual SDI)

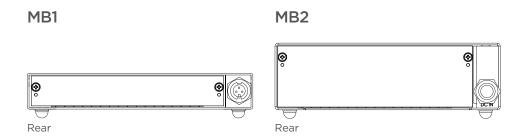


MB6X with DC Power Supply (MB6X-DC)

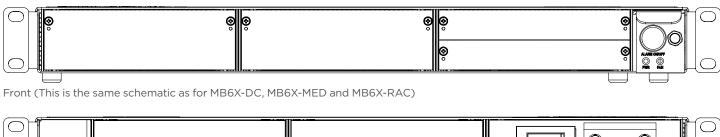





MB6X with Medical Power Supply (MB6X-MED)



MB6X with Redundant AC Power (MB6X-RAC)



MB21X

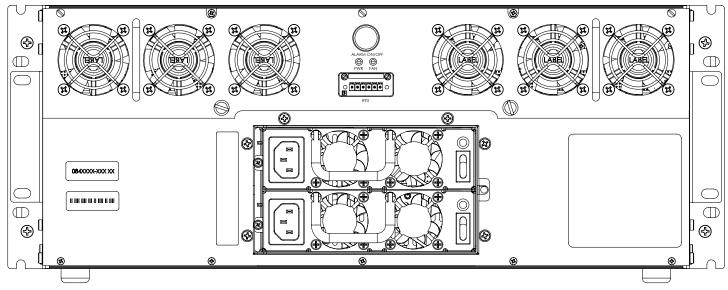

Rear - With dual power supplies, removable fans, and station alarm interface

Makito X Product Name	SKU	Description
ENCODERS		
Makito X H.264 Single SDI	S/B-292E-HDSDI1	Makito X Encoder Appliance (S) or Blade (B) HD H.264 IP video encoder supporting a single 3G/HD/SD-SDI and Composite
Makito X H.264 Dual SDI	S/B-292E-HDSDI2	Makito X Encoder Appliance (S) or Blade (B) HD H.264 IP video encoder supporting dual 3G/HD/SD-SDI and Composite
Makito X H.264 DVI	S/B-292E-DVI	Makito X Encoder Appliance (S) or Blade (B) HD H.264 IP video encoder supporting a single DVI-I and Component
Makito X HEVC Single SDI	S/B-292E-SDI1-HEVC	Makito X HEVC Appliance (S) or Blade (B) HD HEVC/H.264 IP video encoder supporting a single 3G/HD/SD-SDI or Composite
Makito X HEVC Dual SDI	S/B-292E-SDI2-HEVC	Makito X HEVC Appliance (S) or Blade (B) HD HEVC/H.264 IP video encoder supporting dual channel 3G/HD/SD-SDI or Composite
Makito X Harsh Single SDI	S-292E-X1H	Makito X Single SDI Encoder Appliance for Harsh Environments
Makito X Harsh Dual SDI	S-292E-X2H	Makito X Dual SDI Encoder Appliance for Harsh Environments
Makito X Harsh Single DVI	S-292E-DVI-H	Makito X Single DVI Encoder Appliance for Harsh Environments
Makito X4	S/B-MX4E-SDI4	Makito X4 SDI Encoder Appliance (S) or Blade (B) - H.264/AVC & H.265/HEVC IP Video Encoder - Quad channel 3G/HD/SD-SDI
DECODERS		
Makito X H.264 Single Decoder	S/B-292D-HD1	Makito X Decoder Appliance (S) or Blade (B) HD H.264 IP Video decoder supporting single channel 3G/HD/SD-SDI and HDMI
Makito X H.264 Dual Decoder	S/B-292D-HD2	Makito X Decoder Appliance (S) or Blade (B) HD H.264 IP Video decoder supporting dual channel 3G/HD/SD-SDI and HDMI
Makito X HEVC Single Decoder	S/B-292D-HD1-HEVC	Makito X HEVC single channel decoder appliance (S) or blade (B)
Makito X HEVC Dual Decoder	S/B-292D-HD2-HEVC	Makito X HEVC dual channel decoder appliance (S) or blade (B)
Makito X Harsh Single Decoder	S-292D-X1H	Makito X Single Channel Decoder Appliance for Harsh Environments
Makito X Harsh Dual Decoder	S-292D-X2H	Makito X Dual Channel Decoder Appliance for Harsh Environments
RACKMOUNT KITS		
21 Slot Chassis with Dual Redundant AC for Makito X Blades	F-MB21X-R	Rackmount 4RU Chassis - Up to 21 Makito X mini-blades, Redundant Dual AC power supply, 100-240VAC 47Hz-63Hz, 600 Watt max.
6 Slot Chassis Redundant AC	F-MB6X-RAC	1RU Rackmount Chassis – Up to 6 Makito/Makito X/Torpedo2 mini-blades, Redundant AC power supply, 90-264VAC, 47Hz-63Hz, 300 Watt max.
6 Slot Chassis DC	F-MB6X-DC	Rackmount 1RU Chassis - Up to 6 Makito/Makito X/Torpedo2 mini-blades, DC power supply, 2-36 VDC, 300 watt max.
6 Slot Chassis Medical Grade AC	F-MB6X-MED	Rackmount 1RU Chassis - Up to6 Makito/Makito X/Torpedo2mini-blades, Medical grade AC power supply, 90-264VAC, 47Hz-63Hz, 300 Watt max.
1RU appliance mounting bracket	RU-MB1-1 RU-MB1-2	1RU mounting bracket for one or two single-height appliance chassis
2RU appliance mounting bracket	RU-MB2-1 RU-MB2-2	2RU mounting bracket for one or two double-height appliance chassis

 $[\]hbox{\bf *} \ \hbox{For complete pricing and ordering, contact us at sales@haivision.com\,or\,your\,certified\,Haivision\,reseller.}$



- NOTES -

Do you have specific OEM needs?

Contact us: info@haivision.com | 1-877-224-5445

info@haivision.com | North America: 1.877.224.5445 haivision.com | International: +1.514.334.5445





www.haivision.com